

READ PRIOR TO ASSEMBLY

NOTE: Kindles™ are only approved for use with specific heaters. For a list of approved heaters please call Kindle Living at 310-400-3024 or go to our website at www.KindleLiving.com.

NOTE: Never operate indoors! If you smell gas, shut off appliance and extinguish any open flames. If odor persists call your gas company.

NOTE: (Before burning) Due to protective oils used on the metals of your heater during the manufacturing process, some excessive smoke will rise from your heater during the first 15-30 minutes of it's first use. We suggest igniting the heater to burn off these protective oils and then letting it cool before mounting the Kindle™ Shade to the heater shade bracket on the heater head.

NOTE: Prior to each use ensure that the heater is clean and free from debris including excessive dust, leaves, and other potentially combustible materials that might impede its safe operation.

NOTE: Consult and adhere to the instructions provided by the patio heater and propane tank manufacturers for proper installation, ignition, and operation.

NOTE: In windy situations, please remove the Kindle™ Shade or store heaters away from high wind gusts.

NOTE: Please report any tears or rips in the firewall lining of your Kindle™ Shade to the manufacturer for repair. Care should be taken in transport, storage, and assembly of your Kindle™ Heater to avoid such damage to the firewall.

NOTE: When storing your Kindle™ Heater avoid excess moisture and debris. Be sure to clean it prior to first use after storing.

IF YOU HAVE LIGHTS:

NOTE: The green light on the charger will turn off when the battery is at greater than 80% capacity, however, the battery pack must be charged for 12 hours the first time.

NOTE: Fully charge your battery for 12 hours prior to first use.

NOTE: For Natural Gas Heater the *battery pack* and *controller* can be adhered directly to the *heater's post*.

NOTE: When the battery is fully charged, unplug it from the charger. Leaving it plugged in too long will eventually reduce the longevity of the battery.

NOTE: If not in use please fully charge your light ring every 3 months.

NOTE: Do not rest or position the *controller*, *battery pack*, or *leads* on the propane tank.

NOTE: If you have a multi-color RGB light ring the remote control must be held very close to the Kindle Base to work. This is to avoid confusion with other Kindle receivers.

○ **Cleaning & Maintenance:**

Body & Shade (Outside) – Kindle body and lampshade are both made of composite resins that are inherently scratch, chemical, UV and fade resistant. All surfaces—except for Firewall—should be regularly washed clean with soapy water using a brush or sponge (avoid abrasive pads) and towel dried. A light non-abrasive cleaner (i.e. “Simple Green” or “Windex”) works well. You may use Acetone, alcohol, or paint thinner for heavier cleaning or other stubborn marks. Once per year, or as needed, the body and shade may be returned to the manufacturer for “flaming,” which helps re-establish the original shine of the Kindle.

Shade (Inside) – the flannel like grey material you see on the inside of the shade is a patented material called “Firewall.” This material has been designed to deflect heat and care must be taken in the cleaning process. Firewall material may be dusted to remove dirt, but do not scrub, brush, or use excessive moisture in cleaning this material. If a tear occurs please contact Kindle™ Living at (310) 400-3024 for a replacement or repair.

Hardware, and Shade Bracket should be kept clean, periodically inspected for unusual wear and tear, and re-tightened when necessary.

○ **Limited Warranty & Service**

Kindle Living products are warranted to be free of manufacturing defects for a period of 1 year from date of purchase except for accessory lights, or other electronic products, which are warranted for 90-days. Warranty is limited to factory repair or replacement of parts, at company's sole option, and exclusive of all packing and freight charges. Warranty expressly excludes damage caused through neglect in the use of the product—such as failing to take precautionary measure during windy conditions—or for non-intended use. Please contact Kindle Living with any questions pertaining to the terms of this limited warranty, replacement parts, repairs, maintenance or use.

Please note that Kindle Living is not the manufacturer of the heaters themselves, only the decorative covers. Heaters carry their own, separate, manufacturer's limited warranty which if needed will be fulfilled directly by the heater manufacturer. Please refer to heater instructions for additional information.



When assembling your heater there is no decorative cover. When attaching the post platform to the L brackets omit the washers for the middle bracket and attach the support hook. Do not attach the regulator.



Make sure you have all your parts including the hose clamp and accent ring. You will also need a flat-head screw driver.



Take the top half of the heater out of the base and gently rest it on the shade.



Remove the wing nuts and washers from the top of the heater head and use them to secure the shade bracket to the top of the reflector with the stand-offs pointing away from you. Now stand it on its head and slide the accent ring over the post.



NOTE
If you have a cocktail table accessory use that in place of the ring. Make sure it is upside-down and be very gentle to avoid scratching its surface.




Slide the Kindle Neck over the heater's post. Line up the logo with the knob. With a flathead screwdriver tighten the hose clamp on the Kindle neck. Now slide the second hose clamp (included) over the post and tighten it just below the neck.



If you have a light ring slide it over the heater post with the flat side facing downward. Using the screws provided, secure it to the bottom of the Kindle Neck alternating holes. There are no screw holes on the Kindle Neck. The screws will go directly into the material.

DO NOT OVERTIGHTEN THE SCREWS

You risk cracking the acrylic ring.

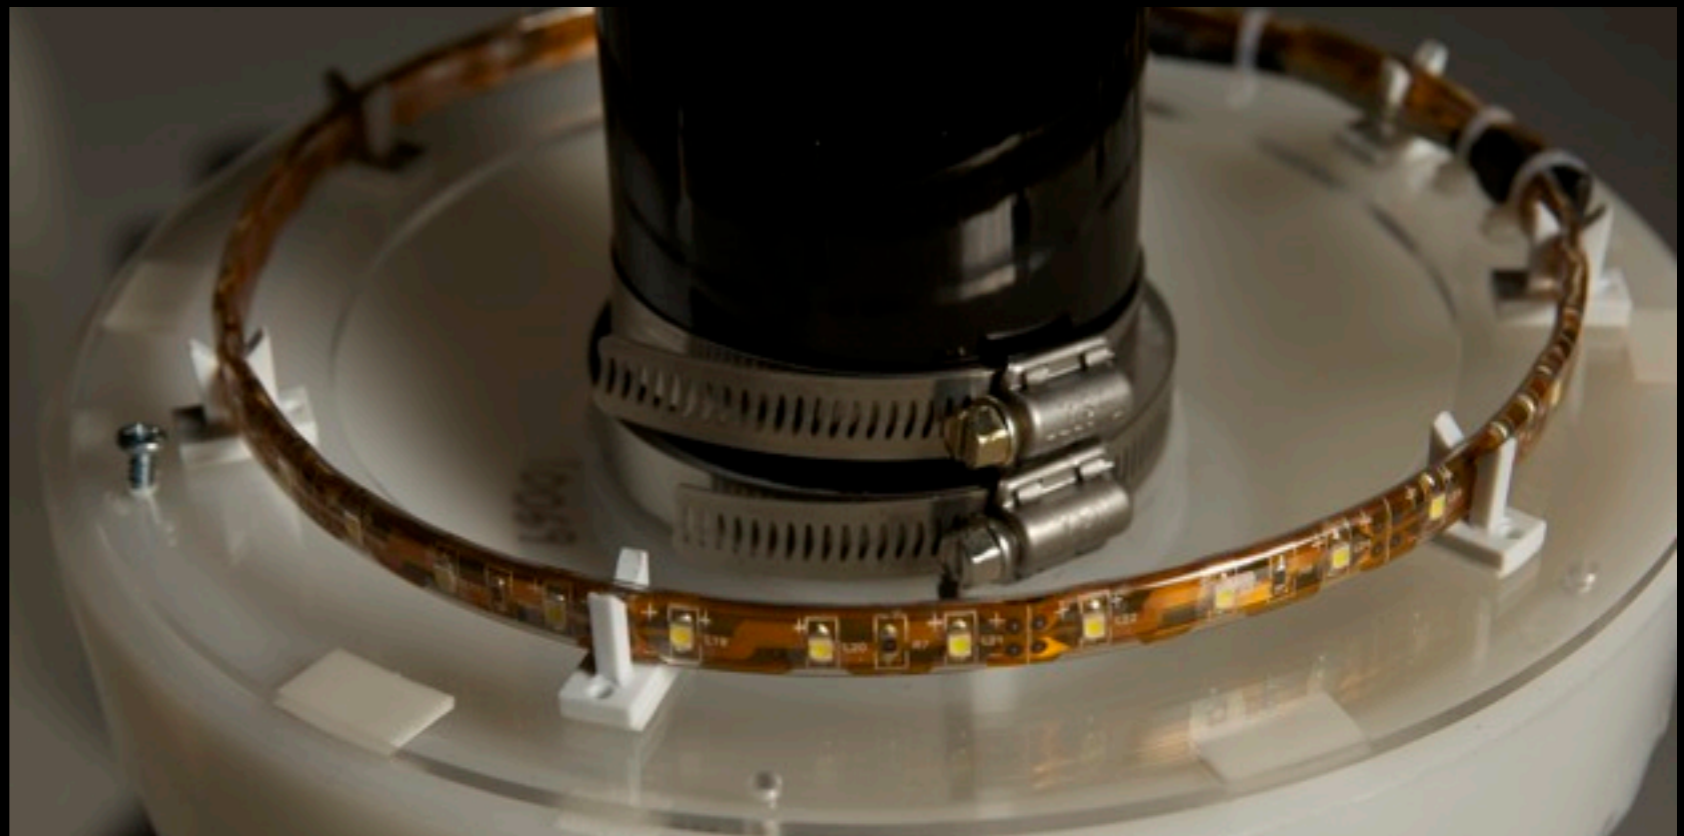

Multi-color Light Ring Settings Chart

Mode	Style	Mode	Style
1	Static Red	7	Static Cool White
2	Static Blue	8	3 Color Jump Transition
3	Static Pink	9	7 Color Jump Transition
4	Static Green	10	3 Color Gradual Transition
5	Static Yellow	11	7 Color Gradual Transition
6	Static Cyan		



Place the Kindle base over the the assembled heater base.

Lift the top half of the heater and place the post back in the post socket of the platform on the heater's base.



NOTE

If you have lights be careful not to put pressure on the light ring or catch any wires during this process. If you have a cocktail table be careful not to scratch it as it may slide down during this process. It is recommended that a second person help guide the post into the socket looking out for the cocktail table and light ring accessories.



Slide the accent ring (or cocktail table) down the Kindle Neck and snap it into place.



With the help of a friend have one person tilt the heater while the other places the shade on the shade bracket.



The lip of the inside of the shade should rest on the edge of the shade bracket.





Lift the base and rest it on the support hook. Attach the quick-release regulator. Hook up your propane tank. Secure it with the chain.





Lower base and...Voilà!